

LS 4071 Cordless Scanner

USB Setup Sheet

Before you begin scanning the bar codes, plug the scanner base into a power outlet and let the scanner charge completely.

Once the scanner is charged, pair the scanner with the base by scanning the bar code on the base.

- Scan: Set All Defaults
- Scan: HID Keyboard Emulation Barcode
- Scan: The rest of the barcodes beginning with the left column, then the right column.

Make sure the keyboard works then try to scan something in stock status. If it does nothing, unplug the scanner base and plug back in.



SET ALL DEFAULTS




HID Keyboard Emulation
(Wait for three beeps before continuing – about 10 seconds)




ENABLE UPC-A




ENABLE CODABAR

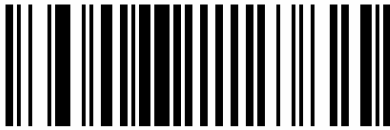


ENABLE UPC/EAN COUPON CODE

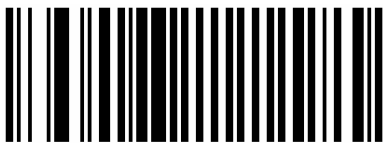

ENABLE CODE 128

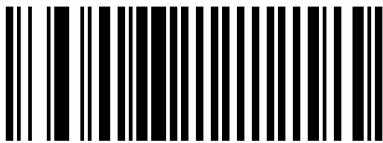


ENABLE CODE 39

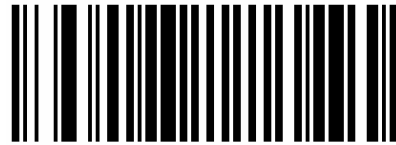


ENABLE EAN-13




ENABLE CODE 93

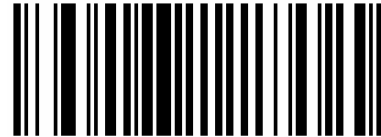

ENABLE EAN-8

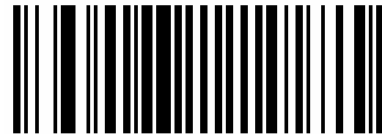

ENABLE UPC-E

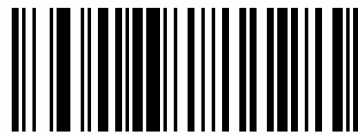


ENABLE UCC/EAN-128



SCAN OPTIONS



<DATA> <SUFFIX>

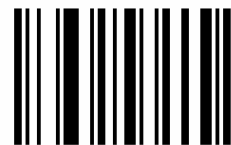

ENTER