

SETTING UP THE SYMBOL LS-4000 series CORDLESS LASER SCANNER

1



SET ALL DEFAULTS

2



Set Synapse RS-232 Defaults

3



19,200

4



**Female Host Connector
Male Local Connector**

5



**TXD Pin 2 Host
TXD Pin 3 Local**

6



BAUD RATE 19,200

7



ENABLE BOOKLAND EAN

8



ENABLE UPC/EAN COUPON CODE

9



ENABLE UCC/EAN-128

10



CODE 39 - ANY LENGTH

Scan: Set All Defaults

Scan: Set Synapse RS232 Defaults

Scan: Baud Rate 19,200

Scan: Female Host Connector/Male Local Connector

Scan: TXD Pin 2 Host/TXD Pin 3 Local

Scan: Baud Rate 19,200

Scan: Codes 7 – 16

Scan: Scan Options

Scan: <Data><Suffix>

Scan: Enter

Scan: Scan Suffix

Scan: 1

Scan: 0

Scan: 1

Scan: 3

11



ENABLE CODE 93

12



CODE 93 - ANY LENGTH

13



ENABLE DISCRETE 2 OF 5

14



D 2 of 5 - ANY LENGTH

15



ENABLE CODABAR

16



CODABAR - ANY LENGTH

17



SCAN OPTIONS

18



<DATA> <SUFFIX>

19



ENTER

20



SCAN SUFFIX

21



1

22



0

23



1

24



3