

# SETTING UP THE SYMBOL LS-4000 series CORDLESS LASER SCANNER

1



SET ALL DEFAULTS

2



Set Synapse RS-232 Defaults

3



19,200

4



Female Host Connector  
Male Local Connector

5



TXD Pin 2 Host  
TXD Pin 3 Local

6



BAUD RATE 19,200

7



ENABLE BOOKLAND EAN

8



ENABLE UPC/EAN COUPON CODE

9



ENABLE UCC/EAN-128

10



CODE 39 - ANY LENGTH

Scan: Set All Defaults

Scan: Set Synapse RS232 Defaults

Scan: Baud Rate 19,200

Scan: Female Host Connector/Male Local Connector

Scan: TXD Pin 2 Host/TXD Pin 3 Local

Scan: Baud Rate 19,200

Scan: Codes 7 – 16

Scan: Scan Options

Scan: <Data><Suffix>

Scan: Enter

Scan: Scan Suffix

Scan: 1

Scan: 0

Scan: 1

Scan: 3

11



ENABLE CODE 93

12



CODE 93 - ANY LENGTH

13



ENABLE DISCRETE 2 OF 5

14



D 2 of 5 - ANY LENGTH

15



ENABLE CODABAR

16



**CODABAR - ANY LENGTH**

17



**SCAN OPTIONS**

18



**<DATA> <SUFFIX>**

19



**ENTER**

20



**SCAN SUFFIX**

21



**1**

22



**0**

23



**1**

24



**3**