



SET ALL DEFAULTS




HID Keyboard Emulation
(Wait for three beeps before continuing – about 10 seconds)




ENABLE UPC-A




ENABLE CODABAR

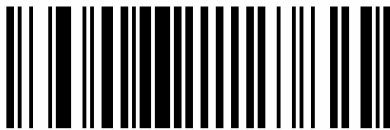


ENABLE UPC/EAN COUPON CODE

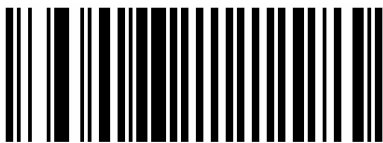

ENABLE CODE 128

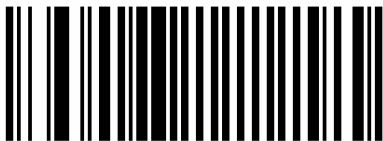


ENABLE CODE 39

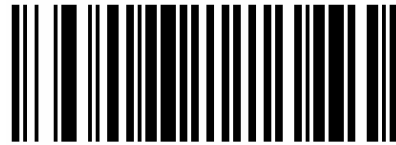


ENABLE EAN-13




ENABLE CODE 93

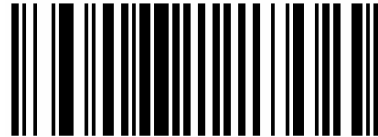

ENABLE EAN-8

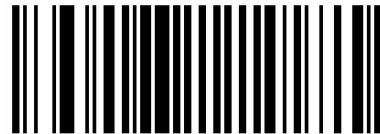

ENABLE UPC-E

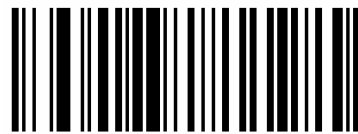


ENABLE UCC/EAN-128



SCAN OPTIONS



<DATA> <SUFFIX>

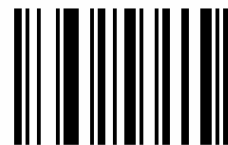

ENTER